


Dräger Alcotest® mouthpieces and funnels Accessory for alcohol measuring devices

The interchangeable Dräger Alcotest® mouthpieces and funnels are specially designed for use with alcohol breathalysers from Dräger. Individually packaged, their design makes them particularly easy and hygienic to use at any time.



Dräger Alcotest® mouthpieces and funnels

Advantages of the standard “Slide ‘n’ click” mouthpiece at a glance

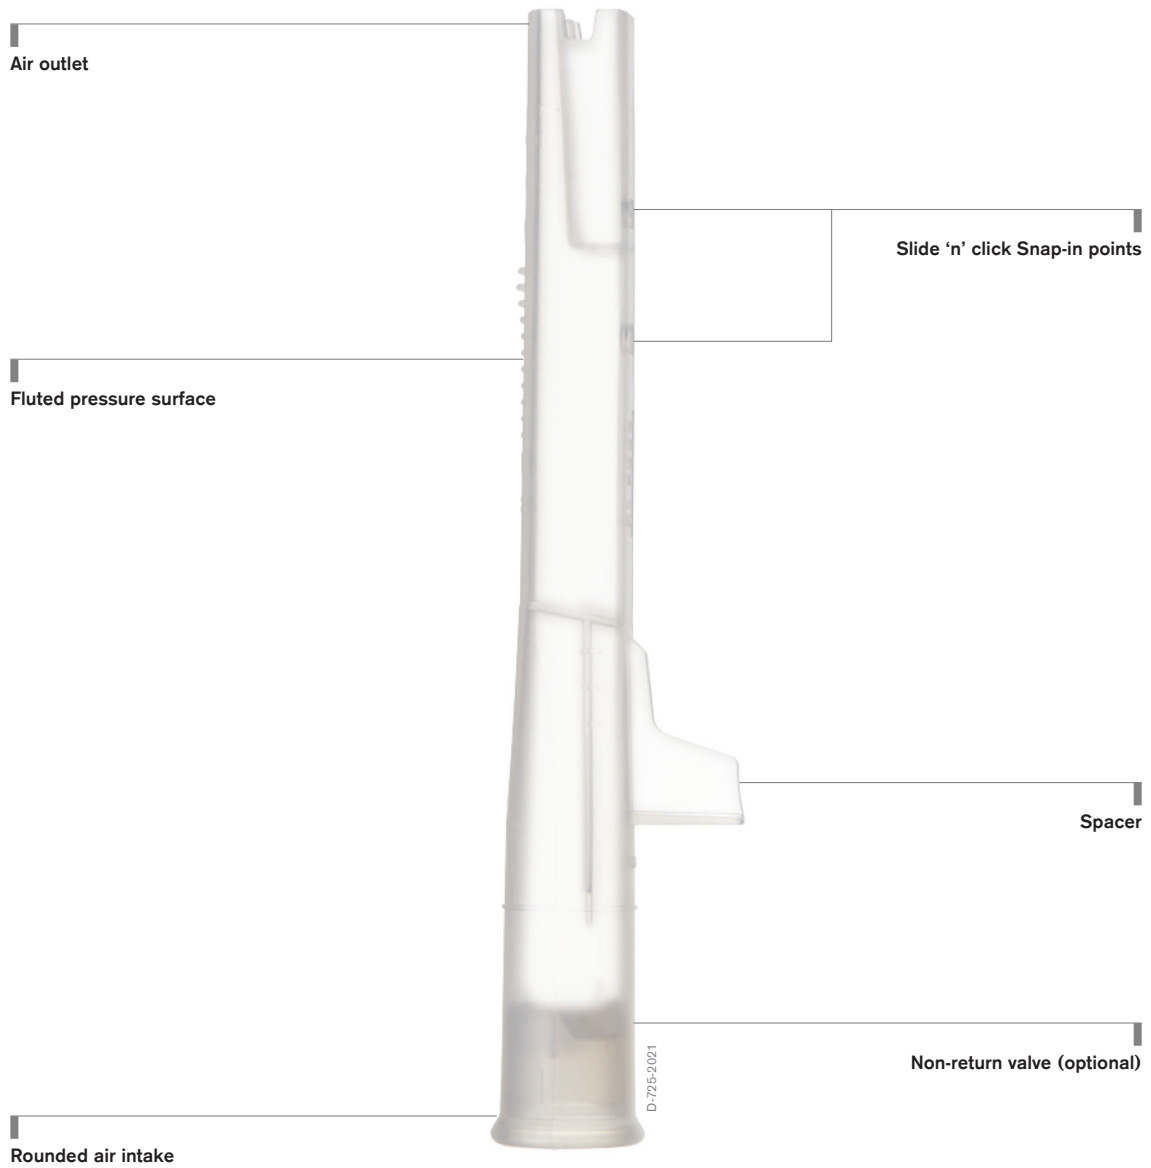

Benefits

Mouthpiece "Standard" for Alcotest® 5820/6000/6820/7000/7510

The sophisticated product design, which has been tried and tested a million times over, offers all the prerequisites for a quick, simple and hygienic breath alcohol analysis:

- The individually packed mouthpieces are connected to each other in a chain and can be separated at a perforation. An additional perforation for opening each individual packaging ensures that the mouthpieces can be placed hygienically without coming into direct contact with the mouth contact area.
- The contour of the Slide'n'click mouthpieces with the grooved pressure surface intuitively enables correct fixation, even in the dark — either from the left or from the right (depending on the design of the mouthpiece holder on the device side). The mouthpieces audibly click into place during this process. After mouthpiece replacement, the Alcotest® device is immediately ready for use again.
- The geometry, which is specially adapted to the Dräger breath alcohol measuring devices, enables an optimal air flow with low breathing resistance and reliable sampling. The breath air is not directed through the device, but past it. The breath sample to be analysed is drawn out of the air flow. The non-closable air outlet of the disposable mouthpieces prevents possibilities of manipulation when delivering a breath test.
- The mouthpieces are positioned to the specially shaped grip area of the Alcotest units so that a safe, hygienic distance can be maintained between the operator's hands and the test subject.
- A spacer on the mouthpieces prevents the lips of the test person from coming into contact with the device housing. Basically, a sample delivery at a 90° angle between the operator and the test person is possible. This prevents the operator from having the sample blow onto them.
- After the test procedure, the mouthpieces can be easily and cleanly removed from the device with a flick of the finger on the spacer. The Alcotest 7510 even offers a special ejector system for this purpose.
- For increased hygiene, Dräger recommends Slide'n'click mouthpieces with a non-return valve. This ensures that (potentially contaminated) breathing air cannot be sucked in again by the subject.
- The material has been tested for skin sensitivity and cytotoxicity, confirming that the standard mouthpieces are safe for skin contact and mouth use.
- A special variant for medical use with the Alcotest 6820 med./Alcotest 7000 med. offer the mouthpieces "Alcomed". They meet the requirements of the MDR directive with regard to packaging and labelling.

Mouthpiece "Classic" for Alcotest® 9510

The Dräger Alcotest Classic mouthpieces are specially designed for analysing forensic results with Dräger's stationary evident breath alcohol measuring instruments.

- The Classic mouthpieces allow hygienic contact between the subject and the instrument.

Benefits

- Up to 25 individually packed mouthpieces are connected in a chain and can be separated at a perforation. An additional perforation for opening the individual packaging ensures hygienic placement of the mouthpieces without direct contact.
- Due to the high metrological requirements of evidential measurement, the breathing air is fed directly into the device here. Small moisture particles are retained by the droplet trap due to the special mouthpiece design and thus cannot enter the device. The use of mouthpieces with a non-return valve also prevents breathing air from being sucked back out of the breathing tube.
- The Classic mouthpieces are also available in a version for devices with additional breath temperature measurement (AT). In this case the mouthpieces are blue.

Hygienic-Flow-Funnel for Alcotest® 5000/7000

This special funnel from Dräger, with its unique "Hygienic-Flow" design, avoids the backflow of one's own exhaled breathing air and thus also possible pathogens from previous test persons. The funnel attachment can be replaced effortlessly, providing the assurance of a hygienic solution.

With the funnel solution for completing many alcohol tests in the shortest possible time, the alcohol test takes place without any physical contact with the test person. The funnel test provides an initial indication of whether or not alcohol is present in the breath. There is no need to put on and take off new mouthpieces, as the sample is simply blown into a funnel.


Mouthpiece for Alcotest® 3820/4000

The intuitively attachable mouthpieces are protected by a cap. They can be easily exchanged for a new test person. The air channel guides exhaled air over the device and only a small sample is extracted from it for evaluation. This ensures that there is no accumulation of alcohol in the device and that all measurements remain accurate and reliable. This is the same procedure that is used in police Alcotest devices.

Mouthpiece for Interlock® 5x00/7x00

The hygienic, individually packaged mouthpieces are specially adapted for use with Dräger Interlock® devices. Their simple clip-on mountings are done on the back of the respective Interlock handpiece, so that the device is not immediately recognisable as an alcohol Interlock in the vehicle. Both the mouthpiece material and the packaging film are fully biodegradable.

Details

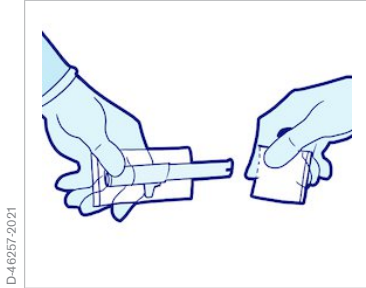

Hygienic, individually perforated packed disposable mouthpieces.



The attachment can be done without any direct contact with the mouthpieces.



When the sample is taken, the air flows past the device and there is a 90 degree angle between the operator and the test subject possible.



With a non-return valve, the intake of potentially contaminated air is not possible.




The spacer prevents direct contact of the lips with the instrument.



Safe and uncomplicated Mouthpiece removal with only one hand.

Alcotest® Hygienic-Flow-Funnel

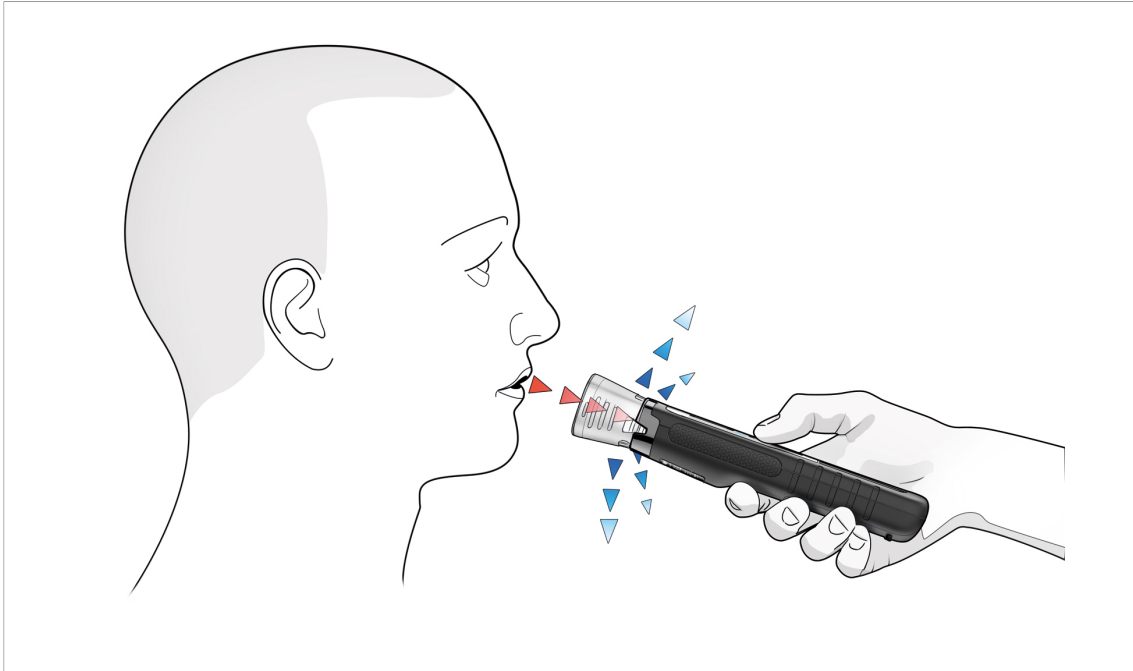

The special funnel attachment with hygienic flow design reduces exhaled breathing air flowing back to the test subject to a minimum. With this hygienic innovation, the risk of infection can be significantly reduced by previous test subjects to subsequent ones.

Related Products



D-31850-2020

Dräger Alcotest® 4000

The breathalyser Dräger Alcotest® 4000 offers responsible drivers a reliable way to test their breath alcohol and gives them the assurance of being legal to drive. This is ensured by precise measurement technology identical to that used by the police: over 30 million breath alcohol tests a year.

Related Products

D-31886-2020



Dräger Alcotest® 5000

The Dräger Alcotest® 5000 is a professional breath-alcohol tester which detects the presence of alcohol. The high-speed breathalyser lets you perform numerous tests in no time. Its special funnel reduces the back-flow of expired air to a minimum, preventing the risk of infection to subsequent test subjects.

D-32068-2020



Dräger Alcotest® 6000

The Dräger Alcotest® 6000 allows the professional user to perform a breath alcohol test with speed and precision. The measuring technology of this small and user-friendly portable measuring device has already been proven worldwide and has been sold over 1,000,000 times.

D-22899-2020



Dräger Alcotest® 7000

The Dräger Alcotest® 7000 sets new standards in alcohol test devices. Its benefits include a wider temperature- and measuring range, low maintenance requirements and various networking options. In addition, the device can perform alcohol tests via both a mouthpiece and a funnel. Reliable alcohol tests have never been so fast, simple and efficient.

ST-15083-2008



Dräger Alcotest® 7510

This compact and robust handheld breath alcohol measuring device is especially designed for advanced screening applications. Ideal for use by police, commerce and industry as an alcohol screening device. The Alcotest® 7510 can in many countries and markets be used as an evidential device.

Related Products



D-43786-2015

Dräger Alcotest® 9510

The Dräger Alcotest® 9510 is an advanced breath alcohol measuring device for applications admissible in a court of law. It is designed to comply with national and international requirements and regulations (OIML R 126, DIN VDE 0405, SR 941.210.4 (CH)). With dual sensor technology, intuitive colour touch screen interface, and modern design the Alcotest® 9510 sets the standard.



D-98730-2013

Dräger Interlock® 7000

The Dräger Interlock® 7000 is an alcohol ignition interlock device (AIID) which prevents a person under the influence of alcohol from starting the vehicle. The Interlock® 7000 has a quick start-up time. Additionally, the device can be equipped with a camera, a GPS and/or a mobile data transfer module, according to the specific customer requirements.

Ordering Information

Mouthpiece for Alcotest 3820/4000 5 pcs., individually hygienically packed	83 25 250
Hygienic flow funnel, Alcotest 5000/7000 10 pcs., individually hygienically packed	83 27 718
Funnel mouthpiece for Alcotest 10 pcs., individually hygienically packed	83 22 621
Mouthpiece Standard/Slide'n'click without non-return valve for Alcotest 5820/6000/6820/7000/7510 1,000 pcs., individually hygienically packed in single cases	37 01 176
Mouthpiece Standard/Slide'n'click without non-return valve for Alcotest 5820/6000/6820/7000/7510 100 pcs., individually hygienically packed	68 10 690
Mouthpiece Standard/Slide'n'click without non-return valve for Alcotest 5820/6000/6820/7000/7510 250 pcs., individually hygienically packed	68 10 825
Mouthpiece Standard/Slide'n'click without non-return valve for Alcotest 5820/6000/6820/7000/7510 1,000 pcs., individually hygienically packed	68 10 830
Mouthpiece Standard/Slide'n'click with non-return valve for Alcotest 5820/6000/6820/7000/7510 100 pcs., individually hygienically packed	68 11 055
Mouthpiece Standard/Slide'n'click with non-return valve for Alcotest 5820/6000/6820/7000/7510 250 pcs., individually hygienically packed	68 11 060
Mouthpiece Standard/Slide'n'click with non-return valve for Alcotest 5820/6000/6820/7000/7510 1,000 pcs., individually hygienically packed	68 11 065
Mouthpiece Alcomed with non-return valve for Alcotest 6820 med./Alcotest 7000 med. 100 pcs., individually hygienically packed	37 05 618
Mouthpiece Classic without non-return valve for Alcotest 9510 25 pcs., individually hygienically packed	68 05 700
Mouthpiece Classic with non-return valve for Alcotest 9510 25 pcs., individually hygienically packed	68 05 703
Mouthpiece Classic with non-return valve for Alcotest 9510 100 pcs., individually hygienically packed	68 10 611
Mouthpiece Classic with non-return valve for Alcotest 9510 10x25 pcs., individually hygienically packed	68 10 610
Mouthpiece Classic AT with non-return valve for Alcotest 9510 DE 25 pcs., individually hygienically packed	68 09 501
Mouthpiece for Interlock 5x00/7x00 1 pc, individually hygienically packed	83 22 446
Mouthpiece for Interlock 5x00/7x00 5 pcs., individually hygienically packed	83 26 550
Mouthpiece for Interlock 5x00/7x00 50 pcs., individually hygienically packed	83 27 627
Mouthpiece for Interlock 5x00/7x00 300 pcs., individually hygienically packed	83 22 597

Notes

Not all products, features, or services are for sale in all countries.
Mentioned Trademarks are only registered in certain countries and not necessarily in the country in which this material is released. Go to www.draeger.com/trademarks to find the current status.

CORPORATE HEADQUARTERS
Drägerwerk AG & Co. KGaA
Moislinger Allee 53–55
23558 Lübeck, Germany
www.draeger.com

REGION EUROPE
Dräger Safety AG & Co. KGaA
Revalstraße 1
23560 Lübeck, Germany
Tel +49 451 882 0
Fax +49 451 882 2080
info@draeger.com

**REGION CENTRAL
AND SOUTH AMERICA**
Draeger Panamá Comercial
S. de R.L.
59 East Street, Nuevo Paitilla,
House 31, San Francisco Town
Panama City, Panama
Tel +507 377-9100 / Fax -9130
servicioalcliente@draeger.com

REGION MIDDLE EAST, AFRICA
Dräger Safety AG & Co. KGaA
Branch Office
P.O. Box 505108
Dubai, United Arab Emirates
Tel +971 4 4294 600
Fax +971 4 4294 699
contactuae@draeger.com

REGION ASIA PACIFIC
Draeger Singapore Pte. Ltd.
61 Science Park Road
The Galen #04-01
Singapore 117525
Tel: +65 6872 9288
Fax: +65 6259 0398
asia.pacific@draeger.com

Locate your Regional Sales
Representative at:
www.draeger.com/contact

